


EN

MX96N




USER'S AND INSTALLER'S MANUAL

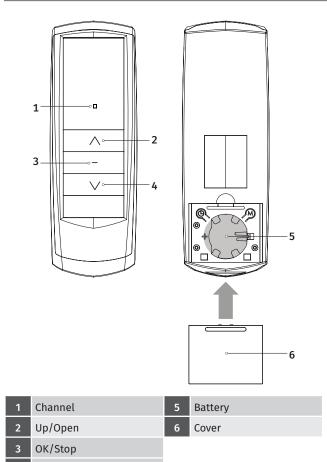

Down/Close

4


- 1 Channel's remote control (Rolling Code)
- Power Supply with 3V's battery (CR2430)
- Operating temperature
- Transmission's frequency of 433,92MHz.

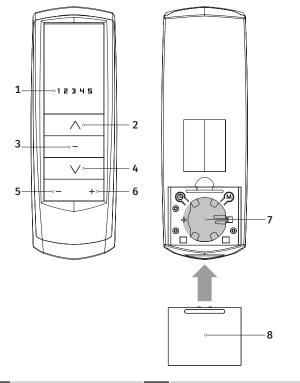

1	Channel	5	Navigation by channels
2	Up/Open	6	Navigation by channels
3	OK/Stop	7	Battery
4	Down/Close	8	Cover

5 Channels remote control (Rolling Code)
Power Supply with 3V's battery (CR2430)
Operating temperature

• Transmission's frequency of 433,92MHz.

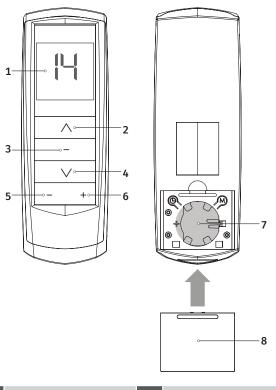

motorline[®]

1	Channel	5	Navigation by channels
2	Up/Open	6	Navigation by channels
3	OK/Stop	7	Battery
4	Down/Close	8	Covery

15 Channel's remote control (Rolling Code)
Power Supply with 3V's battery (CR2430)
Operating temperature

• Transmission's frequency of 433,92MHz.